

HEAVY DUTY GAS FRYER 1 X 12L WITH FAUCET



Power	10.0 kW
Connection	1/2" G25 Natural Gas / G30 LPG
Net Weight	20 kg
Machine Dimensions	B400 x D700 x H280 mm
HS Customs Code	8419818090
EAN Code	8719632123781
Article Number	09395002





GENERAL SPECIFICATIONS


- 1.5 mm thick AISI 304 stainless steel top
- Flush top setting with secure fixing screws
- Installation gap behind the equipment
- Easy access from front panel to all major components
- Stainless steel with satin Scotch-Brite finish
- Adjustable feet


INSTALLATION OPTIONS

- standalone (fixed on a base w/ or w/o door)
- cantilever
- on concrete plinth

GAS FLOW RATE

34120 Btu/hr	8600 kcal	
G20 Natural gas	20mbar	1.06 m³/h
G30/G31 LPG	28-30/37 mbar	0.79 kg/h
G30 LPG	50 mbar	0.79 kg/h

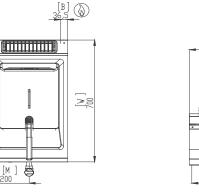





GAS FRYER

- Well capacity 8 12L (W300 x D325 x H240 mm)
- Oil expansion recess incorporated in the top
- Continuous seal of the well on the top by robotic welding
- Interior of one piece deep drawn well with rounded corners for ease of cleaning
- Thermostatic regulation of oil temperature up to a maximum of 190°C
- Supplied with full size baskets per each well
- Safety thermostat with manual reset standard
- Burners tube located inside the well avoid food particles burning or spoiling the oil
- Jet burners made of mild steel 2 pieces for each well
- Easy draining with through a front tap
- Piezo spark ignition for added safety
- Thermostatic gas valve with flame failure device controlled each well with pilot burner

ACCESSORIES

- Full sizes baskets for 12L wells 1 Pcs
- Lid with ergonomic handle for 12L wells 1 Pcs
- Baskets holder and base grid for 12L wells 1 Pcs

