

Project	
Item	
Quantity	
Date	

Model

CHEFTOP MIND.Maps™ ONE BIG

Combi oven		Electric
20 trays GN 1/1		Hinge on the left side
9.5" Touch control panel		
Voltage:	380-415V 3N~ / 220-24	40V 3~



Description

Technologically advanced combi oven able to handle different cooking processes (dehydrating, steaming, low temperature cooking, sous vide cooking, roasting, grilling, pan frying, regeneration regeneration and plate regeneration) and baking process (fresh and frozen bakery and pastry). Thanks to Unox Intensive Cooking technology that guarantees perfect results for each process.

Standard cooking features

Programs

- 1000+ Programs
- MIND.Maps™: draw the cooking processes directly on the display

Manual cooking

- Temperature: 30 °C 260 °C
- Up to 9 cooking steps
- CLIMA.Control: humidity or dry air set by 10%
- Delta T cooking with core probe

Advanced and automatic cooking features

Unox Intensive Cooking

- DRY.Maxi™: rapidly extracts the humidity from the cooking chamber
- STEAM.Maxi™: produces saturated steam
- AIR.Maxi™: manage fans auto-reverse and pulse function
- CLIMALUX™: total control of the humidity in the cooking chamber





XEVL-2011-E1RS

Key features

- ROTOR.Klean™: automatic washing system
- Moulded cooking chamber made of AISI 316 L stainless steel
- Triple glass
- Cooking chamber lighting through LED lights embedded in the door
- Tray supports with anti-tip system
- Drip collection system integrated in the door which works even when the door is open
- 4-speed fan system and high-performance heating elements
- Integrated DET&Rinse™ detergent container
- Wi-Fi / USB data: download/upload HACCP data
- Wi-Fi / USB data: download/upload programs

App and web services


- Data Driven Cooking app & webapp: check and monitor in real-time the operating conditions of your ovens, create and share new recipes. Artificial intelligence transforms consumption data into useful information and allows you to increase daily profits
- Top Training app: download the Unox Top.Training app and learn step by step all the secrets of your new oven's control panel


Accessories


- Ventless hood: steam condensing hood
- Activated Carbon filter for waterless hoods:
- QUICK.Load and trolley system
- Cooking Essentials: special trays
- **DET&Rinse™ PLUS:** cleaning and rinse agents to combine maximum cleanliness with minimum consumption and long life for your oven
- DET&Rinse™ ECO: eco formula for daily cleaning and the utmost respect for the environment. Ideal for mild level of dirt.
- DET&Rinse™ ULTRA: cleaning and rinse agents to combine maximum cleanliness with minimum consumption and long life for your oven
- PURE: resin-based filtering system that eliminates from the water all substances that contribute to the formation of limescale inside the oven cooking chamber
- Wi-Fi / Ethernet: Connection board to keep the oven connected to Unox cloud, mandatory to extend the warranty




XEVL-2011-E1RS

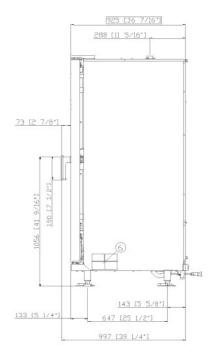

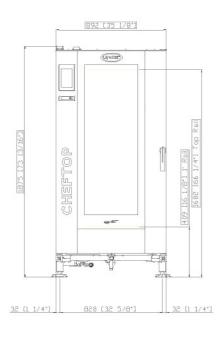

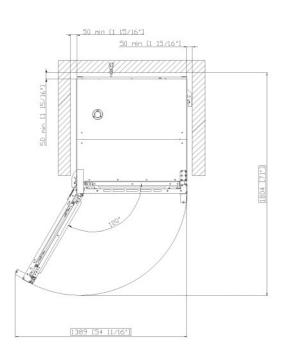

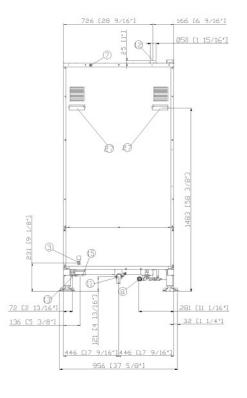

Dimensions and weight

Width	892 mm
Depth	925 mm
Height	1875 mm
Net weight	262 kg
Trav pitch	67 mm

Connection positions

Connection positions	
2	Terminal board power supply
3	Unipotential terminal
6	Technical data plate
7	Safety thermostat
8	3/4" female NPT water inlet
10	Rotor.KLEAN™ inlet

- 11 Chamber drain pipe12 Hot fumes exhaust chimney
- 13 Accessories connection
- **27** Cooling air outlet



XEVL-2011-E1RS

Electrical power supply

CTANDADD

size

Plug

Power cable

requirements*

STANDARD	
Voltage	380-415 V
Phase	~3PH+N+PE
Frequency	50 / 60 Hz
Total power	35.5 kW
Max Amp draw	57 A
Required breaker size	63 A
Power cable requirements*	5G x 16 mm^2
Plug	NOT INCLUDED
OPTION A	
Voltage	220-240 V
Phase	~3PH+PE
Frequency	50 / 60 Hz
Total power	35.5 kW
Max Amp draw	91.5 A
Required breaker	100 A

NOT INCLUDED *Recommended size - observe local ordinance. Cable not included.

4G x 25 mm²

Water Supply

USING A WATER SUPPLY THAT DOES NOT MEET UNOX'S MINIMUM WATER QUALITY STANDARDS WILL VOID ANY WARRANTY.

It is the responsibility of the purchaser to ensure that the incoming water supply is compliant with the listed specifications through adequate treatment measures.

Inflow water specifications	
Free chlorine	≤ 0.5 ppm
Chloramine	≤ 0.1 ppm
рН	7 - 8.5
Electrical conductivity	≤1000 µS/cm
Total hardness	≤ 30 °dH

Steam circuit: inflow water specifications		
Total hardness	≤8°dH	
Chlorides	≤ 250 ppm	

To avoid the formation of limescale the incoming water must have total hardness $\leq 8^{\circ}dH$.

Installation requirements

Installations must comply with all local electrical systems, particularly as for minimum wire gauge required for field connection, hydraulic and ventilation supply. Exhaust and fume analysis must be performed in case of gas ovens.

Register to DDC Service to access data and product specifications. www.ddc.unox.com

^{*}This value refers to daily steam cooking of 1-2 hours. In any case, if with a total hardness ≤ 8°dH there is still production of limescale, it is mandatory to treat the water in order to avoid limescale production. Unox recommends water treatment systems based on ion exchange resins. Water treatment systems based on polyphosphate are not allowed.